

PLA

Tubular sleeve for pipeline corrosion protection

Product Description



CanusaTubes™ are shipped with an inner release liner for protection from contamination.

Equipment List




Propane tank, hose, torch & regulator; Appropriate tools for surface abrasion; Knife, roller, rags & approved solvent cleanser; Digital thermometer with suitable probe; Standard safety equipment; gloves, goggles, hard hat, etc.

Surface Preparation



Ensure that the PE coating edges are beveled to 30°. Clean exposed steel and adjacent pipe coating with a solvent cleanser to remove the presence of oil, grease, and other contaminants.

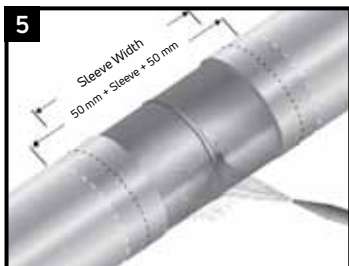

Ensure that the pipe dry before cleaning. Prepare the steel joint area to a minimum of St3 /SP3. Lightly abrade the pipe coating adjacent to the weld area to a distance of 50mm (2") beyond each end of the sleeve width.



Wipe clean or air blast the steel and pipe coating to remove foreign contaminants.

Sleeve Installation




Ensure that there is no dirt or moisture inside the tube and that the tube is not cut. If the sleeve is not useable, a one-piece Wrapid Sleeve or Canusa Wrap sleeve should be used.

Flame Intensity & Torch Size



Pre-Heat

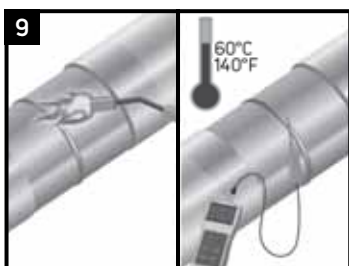


Pre-Heat the joint area to a minimum of 60°C (140°F). Using a temperature measuring device, ensure the correct temperature is reached on the steel and at least 50mm (2") on each side of the sleeve.

Sleeve Installation




Completely remove the inner release liner from the sleeve and centre the sleeve over the area to be sealed.

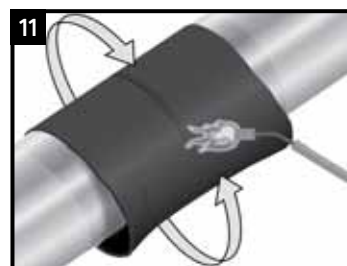


Using the appropriate sized torch, begin at the centre of the sleeve and heat circumferentially around the pipe. Use broad strokes.

Sleeve Installation

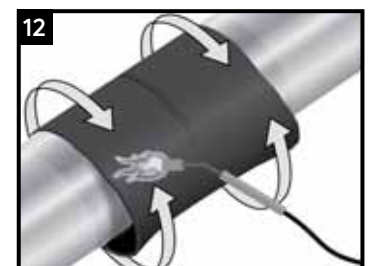


Continue heating from the centre toward one end of the sleeve until recovery is complete. In a similar manner, heat and shrink the remaining side. With a yellow backing, a pink-orange shade will appear when the proper temperature has been reached.

Sleeve Installation

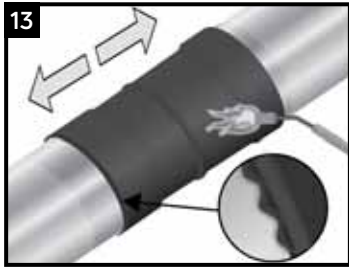

Shrinking has been completed when the adhesive begins to ooze at the sleeve edges all around the circumference. Finish shrinking the sleeve with long horizontal strokes over the entire surface to ensure a uniform bond.

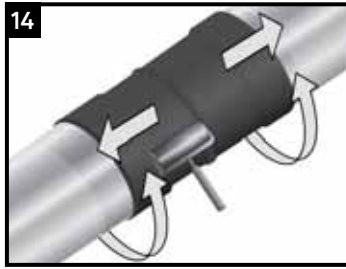

While the sleeve is still hot and soft, use a hand roller to firmly roll the sleeve surface and push any trapped air up and out of the sleeve, as shown above. If necessary, reheat to roll out air.

Inspection



Visually inspect the installed sleeve for the following:

- Sleeve is in full contact with the steel joint.
- Adhesive flows beyond both sleeve edges.
- No cracks or holes in sleeve backing.

Storage & Safety Guidelines

To ensure maximum performance, store Canusa products in a dry, ventilated area. Keep products sealed in original cartons and avoid exposure to direct sunlight, rain, snow, dust or other adverse environmental elements. Avoid prolonged storage at temperatures above 35°C (95°F) or below -20°C (-4°F). Product installation should be done in accordance with local health and safety regulations.

These installation instructions are intended as a guide for standard products. Consult your Canusa representative for specific projects or unique applications.

Canada

SFL Canusa Canada
333 Bay Street, Suite 2400
Toronto ON M5H 2T6, Canada

info@canusacps.com

USA

3813A Helios Way, Suite 900
Pflugerville, TX 78660

info@canusacps.com

Europe

Elskensakker 8
5571 SK Bergeijk
The Netherlands (NL)

Tel: +31 497 54 25 27

Middle East

Plot # 37-WR43, Sector no.: ICAD III
Musaffah South, PO Box 2621
Abu Dhabi, United Arab Emirates

Tel: +971 (2) 204 9800

Quality Management system registered to ISO 9001

Canusa warrants that the product conforms to its chemical and physical description and is appropriate for the use stated on the installation guide when used in compliance with Canusa's written instructions. Since many installation factors are beyond our control, the user shall determine the suitability of the products for the intended use and assume all risks and liabilities in connection therewith. Canusa's liability is stated in the standard terms and conditions of sale. Canusa makes no other warranty either expressed or implied. All information contained in this installation guide is to be used as a guide and is subject to change without notice. This installation guide supersedes all previous installation guides on this product. E&OE

Part No. 99060-012

IG_CanusaTube PLA_rev017

Backfilling Guidelines

After shrinking is complete, allow the sleeve to cool for 2 hours prior to lowering and backfilling. To prevent damage to the sleeve, use selected backfill material, (no sharp stones or large particles) otherwise an extruded polyethylene mesh or other suitable shield should be used.